



# Loading HP HDPE Reinforced Banner (L25500)

## Printing side and media preparation


The matte side of the media is the printing side. The HP HDPE Reinforced Banner media you have should have the printing side facing in. In the future we will transition completely to material with the print side facing out. If you print on the L65500 be sure to load the roll in the correct orientation. If you print on the L25500 you should follow these additional steps for best results.

## Preparation:

If you are loading a roll that has previously been printed and unloaded, make sure the printed media has been trimmed correctly to have straight edges (both front and side) (**←HDPE cannot be cut by the printer cutter**). Some slight side media deformation might happen in the zone having been subjected to the curing process, this zone needs to be trimmed.

## Front Panel settings

When loading the media, **make sure you select "HP Photorealistic"**.

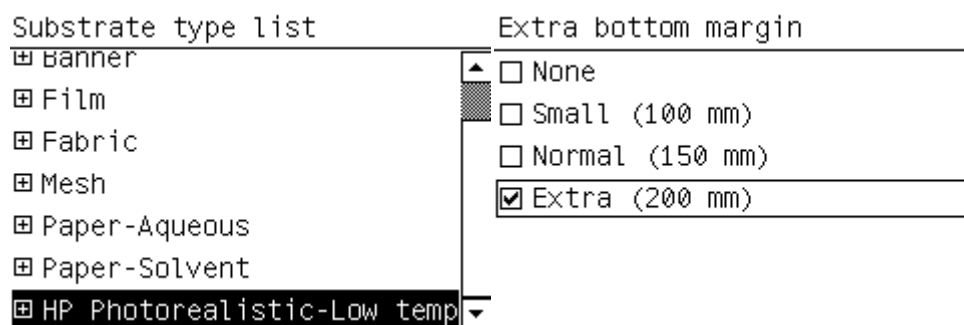

After, make sure to **advance the media** through the printer and use the **media take up reel**.

## Note:

In the future all rolls will be manufactured with the print side facing out. Rolls that have the print side facing out do NOT require any special preparation beyond your normal work flow. The extra bottom margin will not be required.



# Loading HP DuPont™ Tyvek Banner (L25500)

## Printing side and media preparation


The matte side of the media is the printing side. The HP DuPont™ Tyvek Banner media you have should have the printing side facing in. In the future we will transition completely to material with the print side facing out. If you print on the L65500 be sure to load the roll in the correct orientation. If you print on the L25500 you should follow these additional steps for best results.

## Preparation:

If you are loading a roll that has previously been printed and unloaded, make sure the printed media has been trimmed correctly to have straight edges (both front and side). Some slight side media deformation might happen in the zone having been subjected to the curing process, this zone needs to be trimmed.

## Front Panel settings

When loading the media, **make sure you select "HP Photorealistic"**.

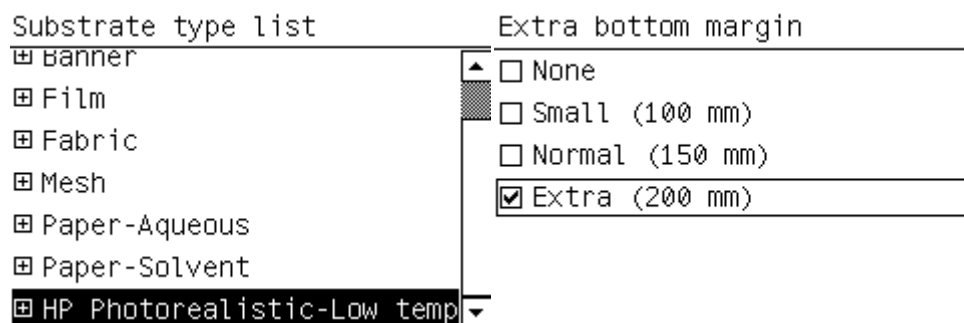

After, make sure to **advance the media** through the printer and use the **media take up reel**.

## Note:

In the future all rolls will be manufactured with the print side facing out. Rolls that have the print side facing out do NOT require any special preparation beyond your normal work flow. The extra bottom margin will not be required.